
Unit:mm

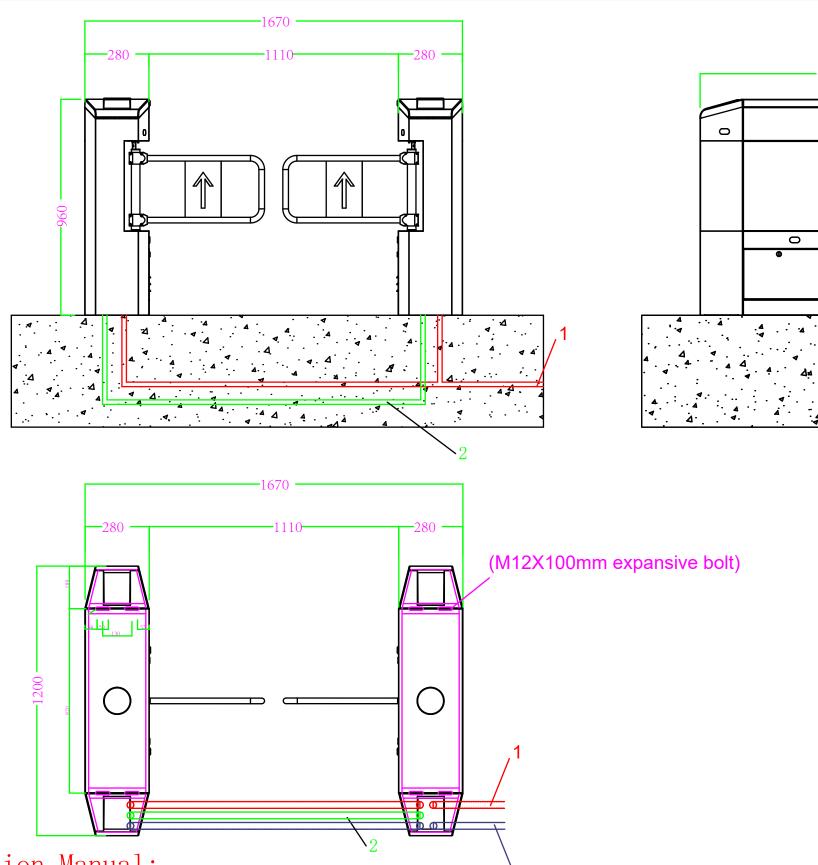

- Installation Manual:

 - 2 \parallel The tube for connecting vice-machine to master machine in the same lane (CAT5 network cables*2PCS, 2 * 0.5mm motor line*1PCS).

V1.7

- 3 | TCP/IP ethernet cable for connecting access device to PC.
- 4 Control board.
- 5 🙉 Fixing the equipment with M12 X 100mm expansive bolt .

Mark: All wires extending out of the ground shall be no less than 2M.