

Unit:mm

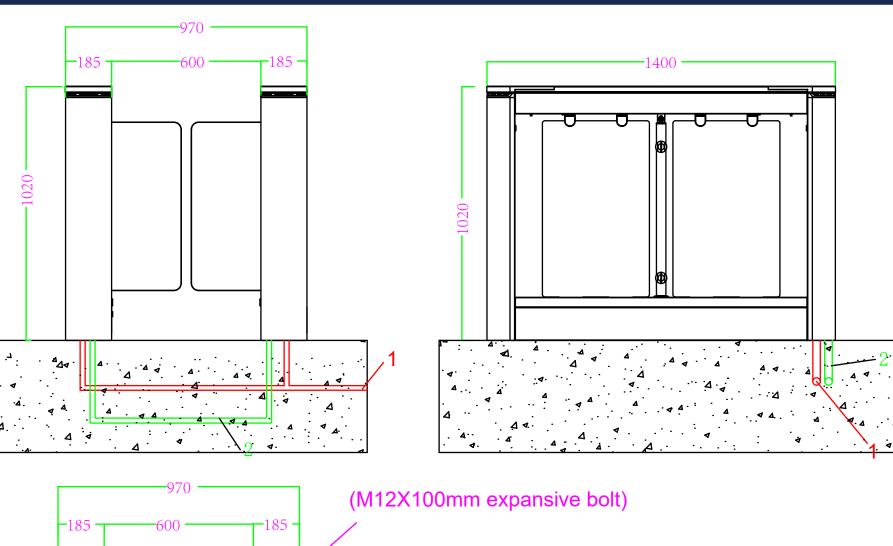

V1.7

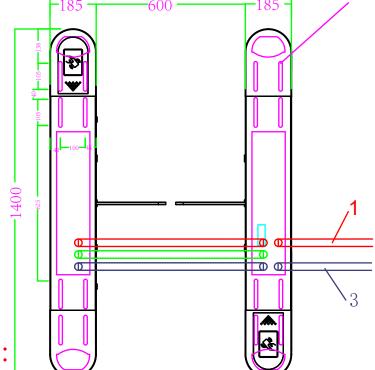

## Installation Manual:

- 2 | The tube for connecting vice-machine to master machine in the same lane (CAT5 network cables\*2PCS, 6 \* 0.5mm motor line\*1PCS).
- 3 | TCP/IP ethernet cable for connecting access device to PC.
- 4 Control board.
- 5 Fixing the equipment with M12 X 100mm expansive bolt .

Mark: All wires extending out of the ground shall be no less than 2M.