


V1.7

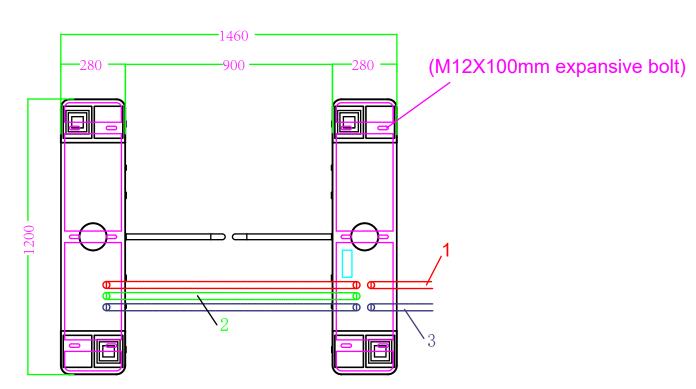

- Installation Manual:

 - 2 | The tube for connecting vice-machine to master machine in the same lane (CAT5 network cables*2PCS, 6 * 1.0mm line*1PCS).
 - 3 | TCP/IP ethernet cable for connecting access device to PC.
 - 4 Control board.
 - 5 •• Fixing the equipment with M12 X 90mm expansive bolt .

Mark: All wires extending out of the ground shall be no less than 2M.