

	1	2	3	4	5	6	7	8
A	Unit : mm							
B								
C								
D								
E	Installation Manual: 1 The Ø20mm PVC tube for AC 220V Power wires (3 X Ø2.0mm). 2 The tube for connecting vice-machine to master machine in the same lane (CAT5 network cables*2PCS, 2 * 1.0mm Power wires*1PCS) . 3 TCP/IP ethernet cable for connecting access device to PC. 4 □ 1.Master servo motor driver,2.Vice- servo motor driver. 5 = Fixing the equipment with M12 X 100mm expansive bolt .							
F	Mark:All wires extending out of the ground shall be no less than 2M.							
	1	3	4	5	6	7	8	

零件代号
图(表)用份量
图 号
图 数
旧版图号
版 次
外 号
日 期