LA3217-S

V1.7

Unit:mm

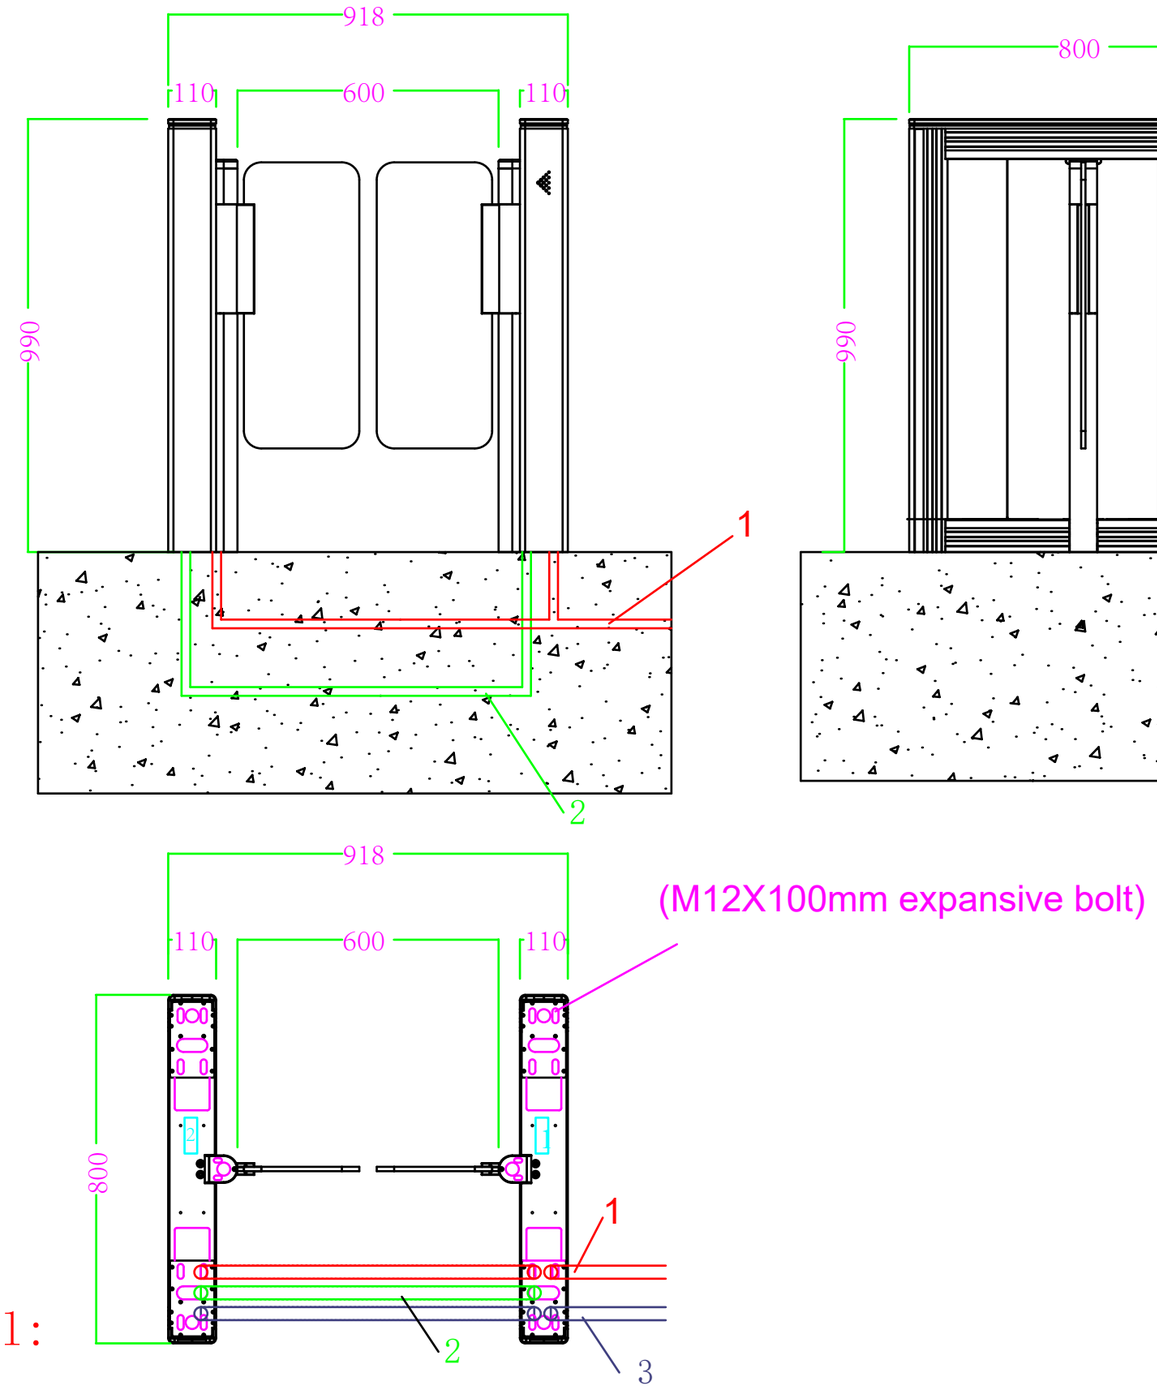

Installation Manual:

1 The Ø20mm PVC tube for AC 220V Power wires(3 X Ø2.0mm).

2 The tube for connecting vice-machine to master machine in the same lane (CAT5 network cables*2PCS, 2 * 1.0mm Power wires*1PCS) .

3 TCP/IP ethernet cable for connecting access device to PC.

4 1.Master servo motor driver ,2 .Vice- servo motor driver.

5 Fixing the equipment with M12 X 100mm expansive bolt .

Mark:All wires extending out of the ground shall be no less than 2M.